

Instructions for Extensions: 4994/4995

 
Important: Please keep for further reference.

For helpful tips and instructions, please visit our website: www.northstatesind.com
 or contact our Customer Care department via email: CustomerService@northstatesind.com
 Phone (763) 486-1756 or Toll Free: (800) 848-8421

Installation and Operation




Step 1: Measure the width of the opening where you intend to install the gate. Please refer to the chart below to determine the correct installation configuration.

Step 2: To add an extension to the gate, insert the extension pins into the holes on the outside of the gate frame. Note: the long ends of the pins go into the gate frame, while the short ends go into the long ends of the extension frames. Next, slip the extension over the pins. Finally, slide the tension bolts with rubber pads completely into the holes on the outside of the extension. **NOTE: For use with model # 4910S, 4991, 4991S. When using multiple extensions, place as equally as possible on either side of the gate frame. Three extensions maximum.**

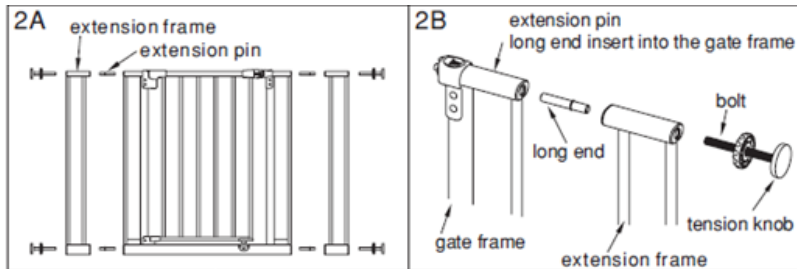

Gate frame

<i>Extensions Needed</i>	<i>Opening Size Range</i>
None	28.37" – 30.75"
2-Bar	31.9" – 34.25"
2-Bar + 2-Bar	35.4" – 37.75"
3-Bar	35.75" – 38.12"
2-Bar + 3-Bar	38.75" – 40.75"
4-Bar	39.25" – 41.62"
3-Bar + 3-Bar	41.4" – 42.5"
2-Bar + 2-Bar + 3-Bar	42.75" – 45.12"
2-Bar + 4-Bar	43.12" – 45.5"
2-Bar + 2-Bar + 4-Bar	46.12" – 48.12"
3-Bar + 4-Bar	46.25" – 48.25"
4-Bar + 4-Bar	49.62" – 51.62"
2-Bar + 3-Bar + 4-Bar	49.5" – 51.5"
2-Bar + 4-Bar + 4-Bar	53.0" – 55.0"
3-Bar + 3-Bar + 4-Bar	53.5" – 55.5"
4-Bar + 4-Bar + 3-Bar	56.87" – 58.87"
4-Bar + 4-Bar + 4-Bar	59.87" – 62.25"

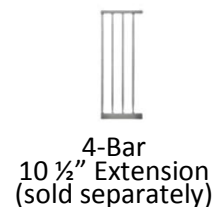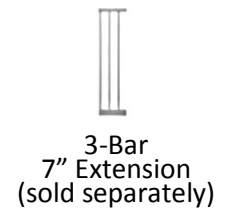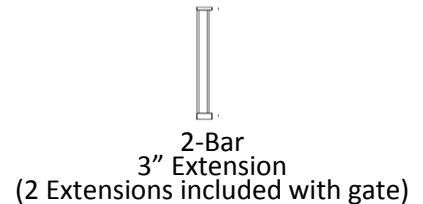   

Distributed exclusively in the United States by
 North States Industries, Inc.
 1507 92nd Lane N.E.
 Blaine, MN 55449
www.northstatesind.com

Manufactured in
 Guang Dong, China