

NO TOOLS NEEDED

 
 
 
Universal fit on side-by-side cabinets with knobs or D-shaped handles.

Decoy-button design redirects child's attention away from hidden functional buttons.

Adjusts to fit cabinets whose handles or door knobs' distance is between 3.54"-7.87"

INSTALLATION METHOD

- 1 Open lock from either side by simultaneously pressing both the top and bottom release buttons that are located on the outer four corners of the gray center housing. Then pull side section apart.
- 2 Loosen or remove flexible straps and place around cabinet knobs or through handles. Reinsert the straps through each slot.
- 3 Snap the lock together and pull both straps tight for a snug fit.



OPERATION

This item can be unlocked from both sides. The intentionally concealed buttons are located on the top and bottom edge of the gray center housing. To open, depress the top and bottom buttons simultaneously on either side of the decoy button to release the lock. The Flexi-Lock can remain on the cabinet handles or door knobs in the non-use position to access cabinet. To reengage lock, simply snap back together to prevent access to the cabinet.

CAUTION: This product will not necessarily prevent all accidents and is only a deterrent. It is not a substitute for proper adult supervision. Stop using when child becomes old enough to defeat it. Regularly check for wear and correct positioning. DO NOT use product if damaged or broken. FOR INDOOR HOME USE ONLY.

WARNING: **Adult installation required.** Do not use this product to guard against toxic and dangerous substances or objects. These dangerous items should always be kept "high-up" or placed in an area completely inaccessible to the child. Any damage to the property during installation or removal of the product is the sole responsibility of the end user.

PRECAUCIÓN: Este producto no necesariamente evitará todos los accidentes y solo es una medida disuasoria. No es un sustituto de la adecuada supervisión por adultos. Deje de usarlo cuando el niño llegue a estar lo suficientemente grande para vencerlo. Revise regularmente por uso y posición correcta. NO use el producto si está dañado o quebrado. SOLO PARA USO EN EL INTERIOR DE LA CASA.

ADVERTENCIA: **Se necesita que un adulto lo instale.** No use este producto como protección contra sustancias u objetos tóxicos y peligrosos. Estos artículos peligrosos siempre se deben mantener "a gran altura" o colocarse en un área completamente inaccesible para el niño. Cualquier daño ocasionado a la propiedad durante la instalación del producto es la exclusiva responsabilidad del usuario final.

MISE EN GARDE: Ce produit ne préviendra pas nécessairement tous les accidents et n'aura qu'un effet dissuasif. Ce produit ne remplace pas la surveillance appropriée par un adulte. Cessez de l'utiliser quand l'enfant devient assez âgé pour en comprendre le fonctionnement. Vérifiez régulièrement l'usure et le positionnement correct. N'utilisez PAS le produit s'il est endommagé ou cassé. POUR USAGE DOMESTIQUE INTÉRIEUR SEULEMENT.

AVERTISSEMENT: **Installation par un adulte requise.** N'utilisez pas ce produit pour vous protéger contre les substances ou objets toxiques et dangereux. Ces objets dangereux doivent toujours être conservés « en hauteur » ou placés dans un endroit totalement inaccessible pour l'enfant. L'utilisateur final est entièrement responsable de tout dommage matériel causé durant l'installation ou le retrait du produit.



MADE IN CHINA

DISTRIBUTED IN THE USA BY:
NORTH STATES INDUSTRIES, INC.
5455 HIGHWAY 169 N.
PLYMOUTH, MN 55442
WWW.NORTHSTATESIND.COM

