

## Instructions for Extension 4900

For use with gate models: 4916, 4917

### Important: Please keep for further reference.



For helpful tips and instructions, please visit our website: [www.northstatesind.com](http://www.northstatesind.com)  
or contact our Customer Care department via email: [CustomerService@northstatesind.com](mailto:CustomerService@northstatesind.com)  
Phone (763) 486-1756 or Toll Free: (800) 848-8421

**NOTE: When using multiple extensions, place as equally as possible on either side of the gate frame.  
The maximum number of extensions that can be used with this gate is three.**

### Installation and Operation

**Step 1:** Measure the width of the opening where you intend to install the gate. Please refer to the chart below to determine the correct installation configuration.

**Step 2:** To add an extension to the gate, insert the extension pins into the holes on the outside of the gate frame. Note: the long ends of the pins go into the gate frame, while the short ends go into the long ends of the extension frames. Next, slip the extension over the pins. Finally, slide the tension bolts with rubber pads completely into the holes on the outside of the extension.

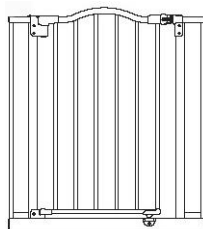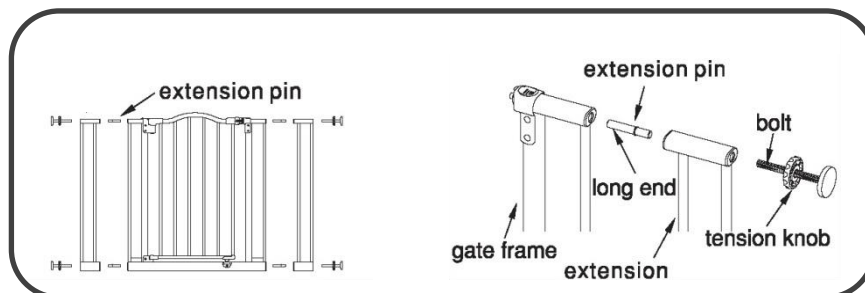

Gate frame

<i>Extensions Needed</i>	<i>Opening Size Range</i>
None	28.25" – 30.75"
2-Bar	31.75" – 34.25"
2-Bar + 2-Bar	35.25" – 38.25"
5-Bar	41.75" – 44.25"
2-Bar + 5-Bar	45.25" – 47.75"
2-Bar + 2-Bar + 5-Bar	48.75" – 51.25"
2-Bar + 5-Bar + 5-Bar	58.75" – 61.25"
5-Bar + 5-Bar + 5-Bar	68.75" – 71.25"

2-Bar  
3 3/4" Extension  
(2 Extensions included with gate)

Model 4900  
5-Bar  
13 1/2" Extension  
(sold separately)