


1

Insert tension
bolt/spindle
into gate frame.




2

Place wall
guards on
the end of
the bolt/
spindle to
properly align.

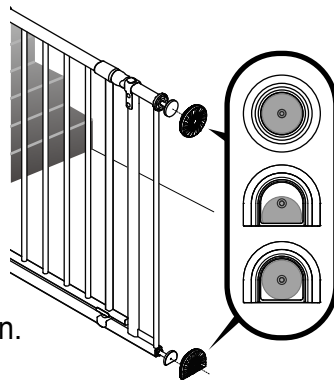

3

Tighten tension
knob for secure fit.

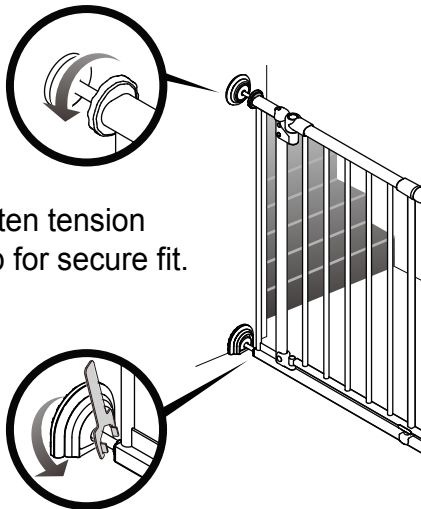

4

Ensure bolts/spindles extend visually
equal distances on both sides of the
gate to ensure a secure fit.

